



CHANGE TIME
NITSUKO ONYX II/III/IV

- From the receptionists set lift handset
- Press the “Intercom” key
- Press “PGM#” (Display will show “DSS, EXT, 6, 9, 8?”)
- Dial “8” (Display will show “Set Time HHMMSS”)
- Enter the hour (00-23 where 00=Midnight, 12=Noon, and 23=11pm)
- Enter the minutes
- Enter the seconds
- Hang up