



CHANGE TIME  
NITSUKO ONYX VS

- From the receptionists set with the handset in the cradle press "PGM#"
- Dial "83"
- Press "PGM#" to scroll through the date options until prompt for hour then enter the two digits for hour (00-23 where 00=Midnight, 12=Noon, and 23=11pm)
- Press "PGM#" then enter the two digits for minutes
- Press the "Save" key