



CHANGE TIME  
NITSUKO OPTIMA

- From the receptionists set with the handset in the cradle press “CL1” key and dial “828”
- Dial password “0000”
- Enter two digits for the year
- Enter two digits for the month
- Enter two digits for the day
- Enter one digit for the day of the week (i.e. Sunday=0, Monday=1, etc)
- Enter two digits for the Hour (24 hour clock)
- Enter two digits for the minutes
- You should now hear 3 confirmation beeps
- Press the “SPK” key to end