



CHANGE TIME
StarTalk Voicemail

- Press **Feature 983**
- Enter the system coordinator mailbox and password combination
- Press **NEXT** until the display shows the time
- Press **CHNG** then enter 2 digits for the hour and 2 digits for the minutes
- Press **AM** or **PM**
- Press **RLS** to end programming session