



CHANGE DATE & TIME IN A TOSHIBA CIX40 SYSTEM

Programming must be performed on a Display phone when phone is idle (no calls incoming or on hold)
The handset is to be left in the cradle while programming

DATE Change

Press **HOLD * # * # 1*2*3***
Enter **0000**
Press **HOLD**
Enter **902**
Press **HOLD**
Press the **First button from the bottom right**
Enter **Date** (YY MM DD)
Press **HOLD, HOLD # # HOLD**

TIME Change

Press **HOLD * # * # 1*2*3***
Enter **0000**
Press **HOLD**
Enter **902**
Press **HOLD**
Press the **Second button from the bottom right**
Enter **Time** (24 hour format), Enter **seconds** (Example: 1130 00)
Press **HOLD, HOLD # # HOLD**